展开尺寸:420x100mm 折好尺寸:100x70mm 折5次

材质:105g双铜纸



OPERATING INSTRUCTIONS 1 Power Switch: This button is used to turn on/off the power bank and to check the battery status. 2 Battery Indicator: This button is used to check the battery level .All four lights illuminated indicate a full battery. 1 Input: Use any Micro USB cable to charge the power bank. Or Use any Type C-Type C cable / Type C-Lightning cable or Type C USB cable to charge the power bank. 4 Output: This power bank is compatible with 5V input devices. 5 Use a Type C-Type C cable or a Type C-Lightning cable for Type C output function. The power bank will automatically

40 seconds.

switch off if not used for longer than

HOW TO CHARGE THE POWER BANK 1 Connect the power bank to a computer, laptop or power adaptor with a Micro USB cable or a Type C USB cable. 2 The battery level Indicator will be flashing when the power bank is charging. 3 When fully charged, the battery level indicator light will stop flashing and remain on. Notice: Improper use can activate the built-in circuit protection causing the power bank to shut down. To reset, simply recharge the power bank.

HOW TO USE THE POWER BANK

commence charging.

1 Ensure the output of the digital device you are charging is 5V.

2 Use a relevant USB charge cable to connect

the power bank by USB port to your device.

Use a relevant Type C charge cable to connect

the power bank by Type C port to your device.

3 Turn on the power bank, your device will

TERY INDICATOR	
Battery Indicator	Battery Level
One Light	0% - 25%
Two Lights	25% - 50%
Three Lights	50% - 75%
Four Lights	75% - 100%

NOTES

- 1 Ensure power bank is fully charged for first 2 To avoid damage to the power bank do not use
- any faulty or damaged cables to charge your
- 3 Do not drop, wet, misuse or attempt to disassemble the power bank.
- 4 Do not place this power bank near any heat
- 5 Do not put any foreign objects in the input/ output port of the power bank, this could lead

to a short circuit and damage.

once every three months.

- This power bank is only compatible with 5V input devices, check the input on your device.
- cable to charge your devices

1 Why is my power bank not working?

- Check the following: • Is the USB cable functioning and connected? • Is the power bank turned on?
- Is there enough battery left in the power bank? • Is the device compatible to the power bank (5V)?

Because the charging current may be

excessive and the over current protection

- 2 Why is the power bank charging, stopping and restarting?
- function has been activated. To reset the power bank, simply recharge it. 3 Why is my power bank not charging my device? 6 Ensure the power bank is fully charged at least
 - 4 How can I use the Type C output function?
 - Use a Type C Type C cable or Type C Lightning