

iGear®



iGear Item Code:IG1972

Search Code: iGear-IG1972

iGear Pty Ltd

Power On/Off.

1. Power On:
 - Long press earbud function sensor for 3 seconds to power-on, voice prompt will indicate power is on.
 - The earbuds automatically connect to each other once powered on.
2. Power Off:
 - Turn off the power by placing the earbuds into the charging case, or long press the earbud function sensor for 3 seconds, voice prompt will indicate power is off.
 - When power is on, if not successfully paired to your device, the earbuds will automatically power off after 3 minutes.

Pairing the earbuds with your device.

1. Keep the earbuds within a 10-meter range of your device.
2. When the earbuds are removed from the charging case, the red and blue lights on the earbuds will flash, after successfully pairing to one another, the flashing red and blue lights will change to blue.
3. Activate the Bluetooth function on your device, select the pairing name "iGear-IG1972" from the list of Bluetooth devices found, pair your earbuds with your device.
4. After successfully pairing, both LED indicators on your earbuds will turn off.

How to troubleshoot if pairing your earbuds was unsuccessful.

- Power on both earbuds, both earbud indicator lights will flash red & blue.
- Double press on/off button on either one of your earbuds, earbuds will re-pair to each other. Once successfully paired, one of the LED indicators on the earbuds will turn off. You can now re-pair the earbuds to your device.
- If re-pairing your earbuds is unsuccessful repeat the above steps.

Unpairing the earbuds from your device.

- Place the earbuds back into the charging case, the earbuds will automatically disconnect from your device. Alternatively, power off the earbuds, or
- turn off your device's Bluetooth function.

Take/Reject a call.

- Simply press the function sensor to take an incoming call.
- Long press the function sensor for 2 seconds to reject an incoming call.
- Simply press the function sensor to hang up during a call.

Music.

- Short press the function sensor to pause/start your music.
- Press function sensor 4 times to use voice function.
- Press the left function sensor two times to skip forward song.
- Press the right function sensor two times to skip back song.

- Press the right function sensor three times to reduce volume.
- Press the left function sensor three times to increase volume.

Switching the ANC (active noise cancellation) function.

- ANC ON: Long press function sensor to turn-on the ANC mode (block out external noise to enhance your listening experience), when ANC mode is turned-on a voice prompt will be heard.
- ANC OFF: Long press function sensor to turn-off the ANC mode (external surround noise will be heard), when ANC is turned-off a voice prompt will be heard.

Charging the earbuds.

- If the earbud batteries are low a warning tone will emit from the earbuds every 5 seconds.
- To charge the earbuds place them in the charging case.
- Whilst charging, the LED charge case indicator will illuminate red, once charged, the red indicator will turn off.

Charging the earbuds case.

- When the battery in the charging case is low,
- Connect your charging case to a power source via USB-C cable supplied.
- Whilst charging, the display screen will flash.

Additional information.

- Make sure the earbuds are paired before use and the Bluetooth function is activated on your device.
- Make sure the earbuds are charged before use.

- When not used for a long time, the battery duration will become shorter.
- We recommend recharging every 3 months to extend battery life.

Safety use of lithium batteries.

The lithium batteries inside these products are not removable, do not attempt to remove these batteries.

Charging case power input: DC 5V/300mAh

Earbuds power input DC 5V/30mAh

Charging environment:10~50°C

Keep the earbuds and the charging case away from extreme temperatures and water.

